

# 2022 DINGHY LISTINGS

MAKE/MODEL	BASE CURB WEIGHT LBS.	SPEED/DISTANCE LIMITS	TOWABLE W/ MANUAL TRANS.	TOWABLE W/ AUTO TRANS.	MILEAGE CITY/HWY.	APPROX. RETAIL PRICE RANGE
------------	-----------------------	-----------------------	--------------------------	------------------------	-------------------	----------------------------

## BUICK

<b>Envision FWD/AWD</b>	3,692	None	N/A	Yes	24/22–31/29	\$31,800–\$42,200
-------------------------	-------	------	-----	-----	-------------	-------------------

**Manufacturer's Instructions:** To prevent the battery from draining while the vehicle is being towed, remove fuses 29 and 32 (Body Control Module) from the instrument panel fuse block.

## CADILLAC

<b>Escalade, Escalade ESV 4WD</b>	5,830	None	N/A	Yes	14/19	\$78,000–\$114,000
-----------------------------------	-------	------	-----	-----	-------	--------------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have a N (neutral) and a 4N setting. Set the parking brake before shifting the transfer case to N (neutral). Turn off the engine, place the vehicle in ACC/ACCESSORY mode by pressing the start button without stepping on the brake pedal, release the parking brake, take the mechanical key with you for re-entry, disconnect the negative battery cable at the battery and secure the nut and bolt, cover the negative battery post with a nonconductive material to prevent any contact with the negative battery terminal, move the steering wheel to make sure the steering column is unlocked. See the owner's manual for additional details.

## CHEVROLET

<b>Colorado 4WD</b>	4,173	None	N/A	Yes	18/28	\$27,100–\$44,200
---------------------	-------	------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have a neutral position and a four-wheel-drive low setting. Shift the transfer case to N (neutral). Negative battery cable must be disconnected and covered with nonconductive material. Keep the ignition in the ACC/ACCESSORY to prevent the steering column from locking. Shift the transmission to Park.

<b>Equinox FWD/AWD</b>	3,274	65 mph/None	N/A	Yes	26/31–25/30	\$25,800–\$32,600
------------------------	-------	-------------	-----	-----	-------------	-------------------

**Manufacturer's Instructions:** For vehicles being dinghy towed, the vehicle should be run at the beginning of each day and at each RV fuel stop for about five minutes. This will ensure proper lubrication of transmission components. If equipped with AWD, engage the AWD system and confirm that it is on. Shift the transmission to N (neutral). Put the vehicle into ACC/ACCESSORY by pressing ENGINE START/STOP one time without the brake pedal applied. An amber light will appear in the button when in ACC/ACCESSORY mode. The chime will ring continuously for 30 minutes. Leave the transmission in N (neutral). Turn off all accessories that are not needed.

<b>Malibu</b>	3,126	65 mph/None	N/A	Yes*	22/33	\$23,400–\$33,500
---------------	-------	-------------	-----	------	-------	-------------------

**Manufacturer's Instructions:** \*Only model with the 2.0-liter engine can be towed. Disconnect the negative battery cable. Run engine at the beginning of each day and at each RV fuel stop for about five minutes. This will ensure proper lubrication of transmission components.

<b>Silverado 1500 4WD</b>	4,730	None	N/A	Yes	TBD	\$36,395
---------------------------	-------	------	-----	-----	-----	----------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have an N (neutral) and a four-wheel-drive Low setting. If equipped with an ignition key, turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disregard the Shift to P (park) DIC message. Disconnect and cover the negative battery post and cable with nonconductive material. If the battery is left connected or the battery cable contacts the post, the Electric Parking Brake may activate during towing, which could cause a crash. Shift the transmission to P (park).

<b>Silverado 2500 HD 4WD</b>	6,418	None	N/A	Yes	TBD	\$39,500–\$63,300
------------------------------	-------	------	-----	-----	-----	-------------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have an N (neutral) and a four-wheel-drive Low setting. If equipped with an ignition key, turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disregard the Shift to P (park) DIC message. Disconnect the negative battery cable and cover negative battery post with nonconductive material. If the battery is left connected or the battery cable contacts the post, the Electric Parking Brake may activate during towing, which could cause a crash. Shift the transmission to P (park).

<b>Silverado 3500 HD 4WD</b>	6,528	None	N/A	Yes	TBD	\$40,700–\$65,700
------------------------------	-------	------	-----	-----	-----	-------------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have an N (neutral) and a four-wheel-drive Low setting. If equipped with an ignition key, turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disregard the Shift to P (park) DIC message. Disconnect the negative battery cable and cover negative battery post with nonconductive material. If the battery is left connected or the battery cable contacts the post, the Electric Parking Brake may activate during towing, which could cause a crash. Shift the transmission to P (park).

MAKE/MODEL	BASE CURB WEIGHT LBS.	SPEED/DISTANCE LIMITS	TOWABLE W/ MANUAL TRANS.	TOWABLE W/ AUTO TRANS.	MILEAGE CITY/HWY.	APPROX. RETAIL PRICE RANGE
------------	-----------------------	-----------------------	--------------------------	------------------------	-------------------	----------------------------

<b>Spark</b>	2,266	70 mph/None	Yes	No	29/38	\$13,600–\$18,100
--------------	-------	-------------	-----	----	-------	-------------------

**Manufacturer's Instructions:** Shift the transmission to N (neutral). Disconnect the negative battery cable and cover the negative battery terminal post with a nonconductive material.

<b>Suburban 4WD</b>	5,824	None	N/A	Yes	14/26	\$55,995–\$76,595
---------------------	-------	------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles that have an N (neutral) and a four-wheel-drive Low setting. With the transmission in D (drive), turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disconnect the negative battery cable and cover post with nonconductive material. Shift the transmission to P (park).

<b>Tahoe 4WD</b>	5,661	None	N/A	Yes	14/26	\$53,295–\$73,895
------------------	-------	------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles that have an N (neutral) and a four-wheel-drive Low setting. With the transmission in D (drive), turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disconnect the negative battery cable and cover post with nonconductive material. Shift the transmission to P (park).

<b>Traverse FWD</b>	4,310	65 mph/None	N/A	Yes	18/27	\$35,475–\$66,275
---------------------	-------	-------------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Remove the shift lever boot by pulling up on the rear of the trim plate. Use a small screwdriver or tool to press and hold the manual release button on the rear right. Put the vehicle in N (neutral). For vehicles being dinghy towed, the vehicle should be run at the beginning of each day and at each RV fuel stop for about five minutes. This will ensure proper lubrication of transmission components. Once the destination is reached, reinstall the shift lever boot. Start the engine and let it idle for more than three minutes before driving the vehicle.

## DODGE

<b>Durango AWD</b>	4,884	None	N/A	Yes	18/25	\$38,075 base, SRT \$66,670 base
--------------------	-------	------	-----	-----	-------	----------------------------------

**Manufacturer's Instructions:** AWD models with two-speed transfer case only (not available in V-6 models). Transmission in P (park), transfer case must be set to N (neutral).

## FORD

<b>Bronco</b>	4,319	None	Yes	Yes	17/18	\$29,300–\$49,475
---------------	-------	------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Requires two-speed transfer case. Place the transfer case in the N (neutral) tow position to engage the four-wheel-down towing feature—refer to owner's manual to follow procedure.

<b>Edge</b>	4,525	65 mph/None	N/A	Yes	21/28	\$43,265
-------------	-------	-------------	-----	-----	-------	----------

**Manufacturer's Instructions:** Start the engine and allow it to run for five minutes at the beginning of each day and every six hours thereafter. Activate Manual Park Release (MPR)—refer to owner's manual to follow procedures.

<b>Escape Hybrid</b>	3,554	70 mph/None	N/A	Yes	44/37	\$28,265–\$33,550
----------------------	-------	-------------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Select "Stay In Neutral" mode—refer to owner's manual transmission and towing sections to follow procedures. Start the engine and allow it to run for one minute at the beginning of each day and every six hours thereafter.

<b>Escape Plug-In Hybrid</b>	3,884	70 mph/None	N/A	Yes	N/A	\$33,075
------------------------------	-------	-------------	-----	-----	-----	----------

**Manufacturer's Instructions:** Select "Stay In Neutral" mode—refer to owner's manual transmission and towing sections to follow procedures. Start the engine and allow it to run for one minute at the beginning of each day and every six hours thereafter.

<b>Expedition/Expedition MAX 4WD</b>	5,623/5,794	None	N/A	Yes	17/22–16/21	\$53,160–\$81,815
--------------------------------------	-------------	------	-----	-----	-------------	-------------------

**Manufacturer's Instructions:** Requires two-speed transfer case. Place the transfer case in the N (neutral) position to engage the four-wheel-down towing feature—refer to owner's manual to follow procedure.

<b>F-150 4WD</b>	4,275	None	N/A	Yes	16/27	\$34,635–\$77,760
------------------	-------	------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Place the transfer case in the N (neutral) tow position to engage the four-wheel-down towing feature—refer to owner's manual to follow procedure.

<b>F-250/F-350/F-450 Super Duty 4WD</b>	6,112	None	N/A	Yes	N/A	\$39,285–\$93,565
---	-------	------	-----	-----	-----	-------------------

**Manufacturer's Instructions:** Place the transfer case in the N (neutral) tow position to engage the four-wheel-down towing feature—refer to owner's manual to follow procedure.

<b>Maverick Hybrid</b>	3,674	None	N/A	Yes	42/33	\$19,995–\$25,860
------------------------	-------	------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Recreational flat towing is possible with the hybrid model only. Front-wheel-drive EcoBoost models must have the front wheels on a two-wheel dolly, while all-wheel-drive models must be on a trailer with all four wheels off the ground. Emergency flat towing is possible, but there are special restrictions.

MAKE/MODEL	BASE CURB WEIGHT LBS.	SPEED/DISTANCE LIMITS	TOWABLE W/ MANUAL TRANS.	TOWABLE W/ AUTO TRANS.	MILEAGE CITY/HWY.	APPROX. RETAIL PRICE RANGE
<b>Ranger 4WD</b>	4,354	None	N/A	Yes	20/24	\$28,570–\$38,675

**Manufacturer's Instructions:** Place the transfer case in the N (neutral) tow position to engage the four-wheel-down towing feature—refer to owner's manual to follow procedure.

## G M C

<b>Canyon/Canyon Denali 4WD</b>	4,180	None	N/A	Yes	19/24	\$33,395 base
---------------------------------	-------	------	-----	-----	-------	---------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have a N (neutral) position and a four-wheel-drive Low setting. Shift the transfer case to N (neutral). Negative battery cable must be disconnected and covered with nonconductive material. Keep the ignition in the ACC/ACCESSORY to prevent the steering column from locking. Shift the transmission to P (park).

<b>Sierra Limited 1500 4WD</b>	4,650	None	N/A	Yes	15/20	\$37,495 base
--------------------------------	-------	------	-----	-----	-------	---------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have an N (neutral) position and a four-wheel-drive Low setting. If equipped with an ignition key, turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disconnect the negative battery cable and cover post/cable with nonconductive material.

<b>Sierra/Sierra Denali 1500 4WD</b>	4,650	None	N/A	Yes	15/20	35,800 base
--------------------------------------	-------	------	-----	-----	-------	-------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have an N (neutral) position and a four-wheel-drive Low setting. If equipped with an ignition key, turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disconnect the negative battery cable and cover post/cable with nonconductive material.

<b>Sierra/Sierra Denali 2500 HD 4WD</b>	6,418	None	N/A	Yes	N/A	\$41,695 base
---	-------	------	-----	-----	-----	---------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have an N (neutral) and a four-wheel-drive Low setting. If equipped with an ignition key, turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disregard the Shift to P (park) DIC message. Disconnect the negative battery cable and cover cable/post with nonconductive material. If the battery is left connected or the battery cable contacts the post, the Electric Parking Brake may activate during towing, which could cause a crash. Shift the transmission to P (park).

<b>Sierra/Sierra Denali 3500 HD 4WD</b>	6,528	None	N/A	Yes	N/A	\$42,395 base
---	-------	------	-----	-----	-----	---------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles with a two-speed transfer case that have an N (neutral) and a four-wheel-drive Low setting. If equipped with an ignition key, turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disregard the Shift to P (park) DIC message. Disconnect the negative battery cable and cover cable/post with nonconductive material. If the battery is left connected or the battery cable contacts the post, the Electric Parking Brake may activate during towing, which could cause a crash. Shift the transmission to P (park).

<b>Yukon/Yukon Denali, Yukon XL/ Yukon XL Denali 4WD</b>	5,661	None	N/A	Yes	16/20	\$52,595 base
--	-------	------	-----	-----	-------	---------------

**Manufacturer's Instructions:** Only dinghy tow four-wheel-drive vehicles that have an N (neutral) and a four-wheel-drive Low setting. With the transmission in D (drive), turn the ignition to ACC/ACCESSORY. If equipped with Keyless Access, turn the engine off. Disconnect the negative battery cable and cover negative battery post with nonconductive material.

## J E E P

<b>Cherokee 4WD (Active Drive II)</b>	4,250	None	N/A	Yes	18/24	\$36,795
---------------------------------------	-------	------	-----	-----	-------	----------

**Manufacturer's Instructions:** Only 4x4 models with two-speed Power Transfer Unit (Active Drive II) may be towed. Transmission in P (park), Power Transfer Unit in N (neutral). Ensure that the Auto Park Brake feature is disabled before towing to avoid inadvertent Electric Park Brake engagement. See the owner's manual for additional details.

<b>Gladiator</b>	4,650	None	Yes	Yes	3.6L MTX: 16/23 3.6L ATX: 17/22 3.0L Diesel: 21/27	\$35,315–\$47,260
------------------	-------	------	-----	-----	--	-------------------

**Manufacturer's Instructions:** Automatic transmission in P (park). Manual transmission in gear (NOT IN NEUTRAL). Transfer case in N (neutral). Tow in forward direction.

<b>Grand Cherokee WK 4WD</b>	4,746	None	N/A	Yes	18/25	\$43,690
------------------------------	-------	------	-----	-----	-------	----------

**Manufacturer's Instructions:** Only Quadra-Trac II and Quadra-Drive II four-wheel-drive models can be towed. Transmission in P (park), transfer case in N (neutral). Disconnect negative battery cable.

MAKE/MODEL	BASE CURB WEIGHT LBS.	SPEED/DISTANCE LIMITS	TOWABLE W/ MANUAL TRANS.	TOWABLE W/ AUTO TRANS.	MILEAGE CITY/HWY.	APPROX. RETAIL PRICE RANGE
Grand Cherokee 4WD/Grand Cherokee L	4,747	None	N/A	Yes	3.6L: 19/26 5.7L: 14/22 3.6L (L): 18/25 5.7L (L): 14/22	\$51,275–\$60,895

**Manufacturer's Instructions:** Only Quadra-Trac II and Quadra-Drive II four-wheel-drive models can be towed. Transmission in P (park), transfer case in N (neutral). Disconnect negative battery cable.

Wrangler	3,948	None	Yes	Yes	3.6L MTX: 17/25 2.0L ATX: 22/24 3.6L ATX: 20/24	\$29,725–\$40,500
----------	-------	------	-----	-----	---	-------------------

**Manufacturer's Instructions:** Automatic transmission in P (park). Manual transmission in gear (NOT IN NEUTRAL). Transfer case in N (neutral).

Wrangler Unlimited	4,196	None	Yes	Yes	3.6L MTX: 17/23 2.0L ATX: 21/24 3.6L ATX: 19/24 3.0L Diesel: 22/29	\$33,225–\$44,000
--------------------	-------	------	-----	-----	---	-------------------

**Manufacturer's Instructions:** Automatic transmission in P (park). Manual transmission in gear (NOT IN NEUTRAL). Transfer case in N (neutral).

Wrangler Unlimited 4xe Plug-In Hybrid	5,100	None	Yes	Yes	49/20	\$52,530–\$56,230
---------------------------------------	-------	------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Automatic transmission in P (park). Manual transmission in gear (NOT IN NEUTRAL). Transfer case in N (neutral).

Wrangler Unlimited Rubicon 392	5,103	None	Yes	Yes	13/17	\$74,800
--------------------------------	-------	------	-----	-----	-------	----------

**Manufacturer's Instructions:** Automatic transmission in P (park). Manual transmission in gear (NOT IN NEUTRAL). Transfer case in N (neutral).

## LINCOLN

Corsair Grand Touring Plug-In Hybrid	3,702	70 mph/None	N/A	Yes	78 /33	\$50,130
--------------------------------------	-------	-------------	-----	-----	--------	----------

**Manufacturer's Instructions:** Select "Stay In Neutral" mode—refer to owner's manual transmission and towing sections to follow procedures. Start the engine and allow it to run for one minute at the beginning of each day and every six hours thereafter.

Nautilus	4,545	65 mph/None	N/A	Yes	21/29	\$54,535–\$64,840
----------	-------	-------------	-----	-----	-------	-------------------

**Manufacturer's Instructions:** Only 2.7-liter twin-turbocharged model is towable. Start the engine and allow it to run for five minutes at the beginning of each day and every six hours thereafter. Activate Manual Park Release (MPR)—refer to owner's manual to follow procedure.

Navigator 4x4	5,855	None	N/A	Yes	16/21	\$79,710
---------------	-------	------	-----	-----	-------	----------

**Manufacturer's Instructions:** Vehicle equipped with optional Heavy-Duty Trailer Tow Package and two-speed transfer case only. Shift the transfer case in N (neutral). Refer to owner's manual to follow procedure.

## NISSAN

Versa	2,599	None/500 miles	Yes	No	27/35	\$15,080 base
-------	-------	----------------	-----	----	-------	---------------

**Manufacturer's Instructions:** Always tow with the manual transmission in N (neutral). After towing 500 miles, start and idle the engine with the transmission in N (neutral) for two minutes.

## R A M

1500 4WD	4,994	None	N/A	Yes	20/25	\$37,900 base
----------	-------	------	-----	-----	-------	---------------

**Manufacturer's Instructions:** Automatic transmission in P (park). Transfer case in N (neutral). Tow in a forward direction. See owner's manual for details.

2500 4WD	6,316	None	N/A	Yes	N/A	\$39,980 base
----------	-------	------	-----	-----	-----	---------------

**Manufacturer's Instructions:** Automatic transmission in P (park). Transfer case in N (neutral). Tow in a forward direction.

3500 4WD	6,402	None	N/A	Yes	N/A	\$38,345–\$66,085
----------	-------	------	-----	-----	-----	-------------------

**Manufacturer's Instructions:** Automatic transmission in P (park). Transfer case in N (neutral). Tow in a forward direction. ■